

Artist Bench Assembly Instructions



Unpack the bench, bench legs and small envelope with (4) nuts and (4) lock washers.

Place the bench top upside down on a stable surface.

Turn the height adjustment knobs to raise the wood apron assembly as far as it will elevate.

Take one bench leg and place in the corner of the apron assembly allowing the bolt sticking out of the leg to go through the hole in the metal leg brace.

Place the lock washer on the bolt first, and then thread the nut onto the bolt.

Tighten the nut using a 1/2" wrench. Do not over tighten the nut at this time.

Once all the legs are in place, turn the bench upright, as in picture above.

Push down on the upholstered surface to set the leg height.

Finish tightening the legs with the wrench.

