

JANSEN[®]

PAUL L. JANSEN & SON, INC.

Instructions for Checking / Refilling the Oil in Hydraulic Jacks for Grand Transporters:

Push the hydraulic jack ram all the way down as far as it will go.

Locate the rubber plug which is located on the side of the jack about 2/3 of the way up from the bottom of the jack.

Carefully pry the rubber plug out by using a small flat blade screwdriver, being careful not to gouge or damage the rubber plug.

Acquire a small container of hydraulic jack oil.

Slowly squirt some oil into the hole in the side of the jack, stopping frequently to check if the oil is visible inside the jack. Fill the oil level up to level of bottom of filling hole.

Reinstall the rubber plug by firmly pressing it into the hole.

Pump the jack up and press back down several times to redistribute the oil inside the jack. The jack should now be ready for use.

IMPORTANT:

Keep the large flat washer turned all the way clockwise at all times except when lowering the piano.

1-920-231-5433