

Artist Bench Assembly Instructions

1. Unpack bench, bench legs and small envelope with (4) nuts and (4) lock washers.
2. Place bench top upside down on a stable surface.
3. Turn height adjustment knobs to raise the wood apron assembly as far as it will elevate.
4. Take one bench leg and place in the corner of apron assembly allowing the bolt sticking out of the leg to go through hole in metal leg brace.
5. Place lock washer on bolt first, then thread the nut onto bolt.
6. Tighten nut finger tight only.
7. When all the legs are in place, turn bench upright as shown in picture above.
8. Push down on upholstered surface to set leg height.
9. Finish tightening legs with a 1/2" wrench.

