



J4009 Upright Piano Dolly

Excellent for use in school, showrooms, churches, etc., where upright pianos need to be moved about quickly and easily. Raises piano only 3/4" off the floor. Silent 2-1/2" rubber-tired wheels protect floor finish. Well designed for perfect balance. Heavy-duty frame construction for years of service.



Installation Instructions

1. Raise one end of piano and place dolly underneath keeping dolly as close as possible to inside of piano toe block.
2. Repeat step one (1) on opposite end of piano.
3. It is recommended that dollies be secured to rear of piano as well as underside of piano with lag bolts, wood screws or bolts through holes provided in dollies. (Screws/lag bolts not included).

