



## **Instructions for Checking / Refilling Oil in Hydraulic Jacks for Grand Transporters**

Push hydraulic jack ram all the way down as far as it will go.

Locate rubber plug which is located on side of jack about 2/3 of the way up from bottom of jack.

Carefully pry rubber plug out by using a small flat blade screwdriver. Be careful not to gouge or damage rubber plug.

Acquire a small container of hydraulic jack oil.

Slowly squirt some oil into the hole in the side of jack. Stop frequently to check if oil is visible inside the jack. Fill the oil up to level of bottom of filling hole.

Reinstall rubber plug by firmly pressing into hole.

Pump jack up and press back down several times to redistribute oil inside the jack.

The jack should now be ready for use.

**IMPORTANT:** Keep large flat washer turned all the way clockwise at all times except when lowering piano.