

## J4003 Adjustable Digital Dolly (Modified) Assembly Instructions

**CAUTION: Do not overtighten setscrews!**

Layout dolly components on floor as shown in diagram.

1. Insert A into B. Use Allen Wrench to tighten setscrew.
2. Insert C (Left) into B. Use Allen Wrench to tighten setscrew. Confirm caster bracket protrudes toward rear leg of the piano.
3. Insert D (Left) into C (Left). Use Allen Wrench to tighten setscrew.
4. Insert C (Right) into B. Use Allen Wrench to tighten setscrew. Confirm caster bracket protrudes toward rear leg of the piano.
5. Insert D (Right) into C (Right). Use Allen Wrench to tighten setscrew.
6. Install Single Wheel Casters with brakes onto D (Left) and D (Right).
7. Install Double Wheel Casters onto C (Left) and C (Right). Install Double Wheel Casters onto A.
8. Align dolly to approximate dimensions of piano.
9. Remove digital grand piano casters if digital piano has casters on the bottom of legs.
10. Carefully place piano on dolly. Adjust dolly as needed to fit bottom of piano legs. Tighten all setscrews and nuts holding casters to frame of dolly.

