


# JANSEN<sup>®</sup>

**PAUL L. JANSEN & SON, INC.**

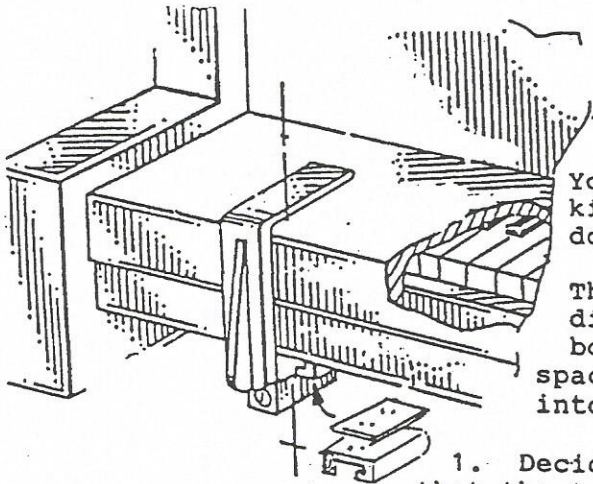

## INSTRUCTIONS

Your "HANDS OFF \* Reserved For Performance" kit includes the lock and shoe, keys, spacers, double-stick tape and screws.

This lock was designed to fit pianos with dimensions of 6" or less from top of fallboard to bottom of key bed. A little extra space can be obtained by mortising the shoe into the underside of the key bed.

1. Decide if you need to use spacers. It is best that the top of the locking device is very close to the top of the fallboard.
2. Mount unit under the key bed at bass end of piano. Be sure to allow for removal of the cheek block and/or key slip screw.
3. Hold lock in position to make sure it will engage properly. Apply tape to shoe or spacer. Install the 4 screws to fasten shoe/spacer to key bed.

The hardened screws which we include will not need a pilot hole, unless the key bed is made of very hard wood.

**1-920-231-5433**

Paul L. Jansen & Son, Inc. • 1550 Harrison Street • Oshkosh, WI 54901-3008  
1-800-BENCHES • 1-800-236-2437 • Fax 1-920-231-5450 • Email: pljansen@aol.com